




## Measure the *CARBON* crank-end

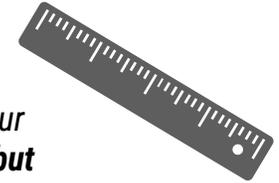


**VIP NOTE :** Due to updates of our carbon cranks over the years, it is best to measure your specific crank to see which boot to fits it best. Here we list some cranks for guidance, **but we still highly recommend measuring your specific crank-end just to be certain.**

- Most older version Carbon cranks
- OLDER GEN1 GIRDER
- TYPE4 E-CRANKS
- *Specialized - Must measure your specific eCrank*


- ZAYANTE / DOON
- GEN1 LYFT / LYFT-HD
- OLDER BOSCH E-CRANKS
- TYPE5 E-CRANKS
- *Specialized - Must measure your specific eCrank*

- GEN2 MTN CRANKS
- TYPE 1 E-CRANKS
- TYPE-2 E-CRANKS
- TYPE-3 E-CRANKS
- TYPE-6 E-CRANKS
- *Specialized - Must measure your specific eCrank*

### BOOT 1

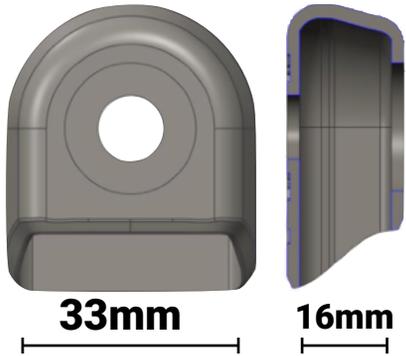

### BOOT 2

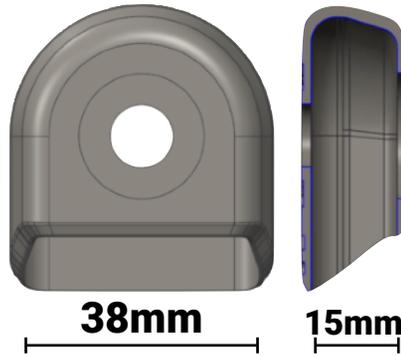

### BOOT 3

