

IMPORTANT : You are required to use proper bearing installation/removal tools to pull/press these bearings into a Praxis bottom bracket. Failing to use correct tools can and will damage your new bearings and/or your BB and void your warranty.

We highly suggest using Enduro's bearing removal/press tool kits or similar shop level bearing tool kit. Do NOT attempt to replace bearings without the correct bearing tools.

If you do not have the correct tools, please take your bike to your local bike shop for bearing replacement!

M30 MODELS FOR REBUILD

*M30-BSA | M30-T47 EB | M30-T47 IB | M30-T47 Asym
M30-BB30/PF30 | M30-BBRight | M30-386EVO**

**Model does not have c-clip*



LEFT/NON-DRIVE

28mm

(Note: reducer faces down!)

RIGHT/DRIVE

30mm

REFERENCE PHOTOS / NOTES

28MM SIDE - Gently pop clip out if your model BB has one. Then you can pull bearing.
(Reinstall after new 28mm bearing is pressed in)




PULLING BEARINGS - Reference of a bearing puller to correctly pull out worn bearings.



30mm PRESS - 30mm use drift to press.



28mm PRESS - Flip the 30mm drift over and use it to press the 28MM down

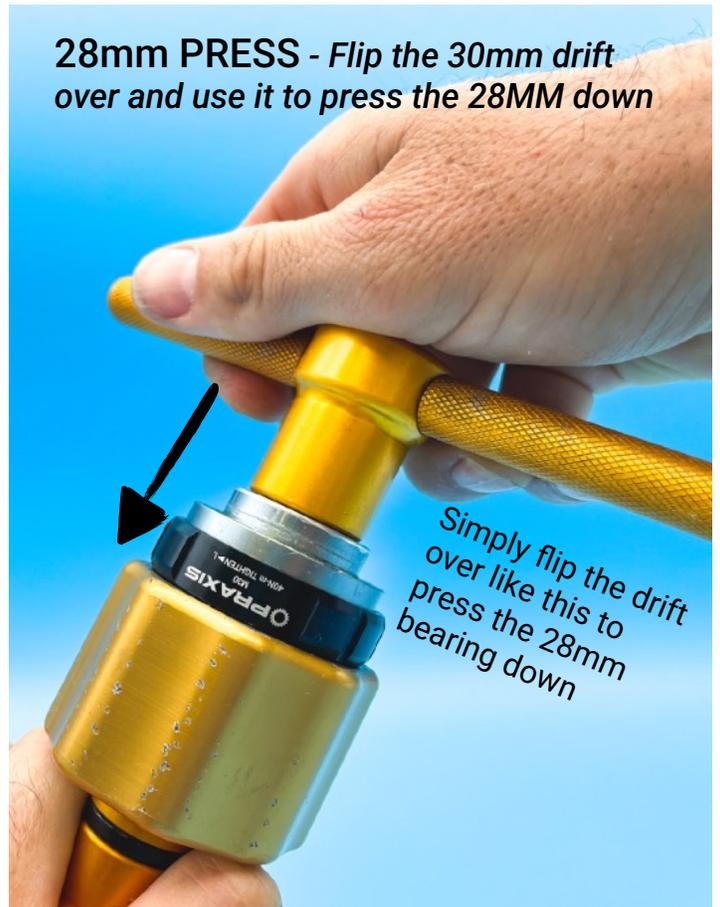

Simply flip the drift over like this to press the 28mm bearing down